


EGR Rolltrac Bootloader


Adding New Firmware to Bootloader

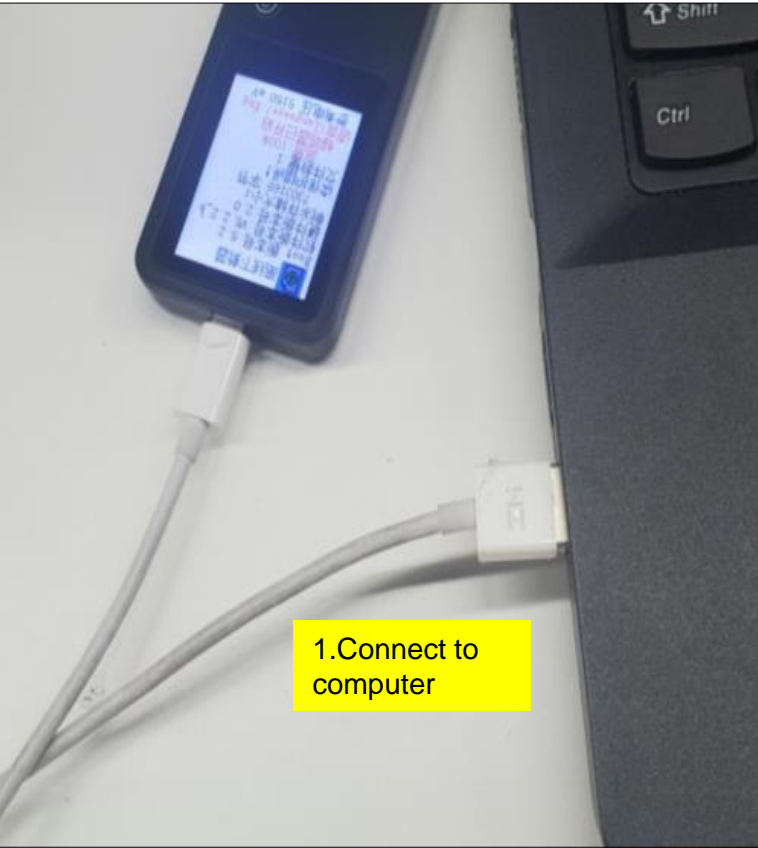


1. Connect to computer







2. Open the HID_OFD5.2_r.exe on the Computer desktop

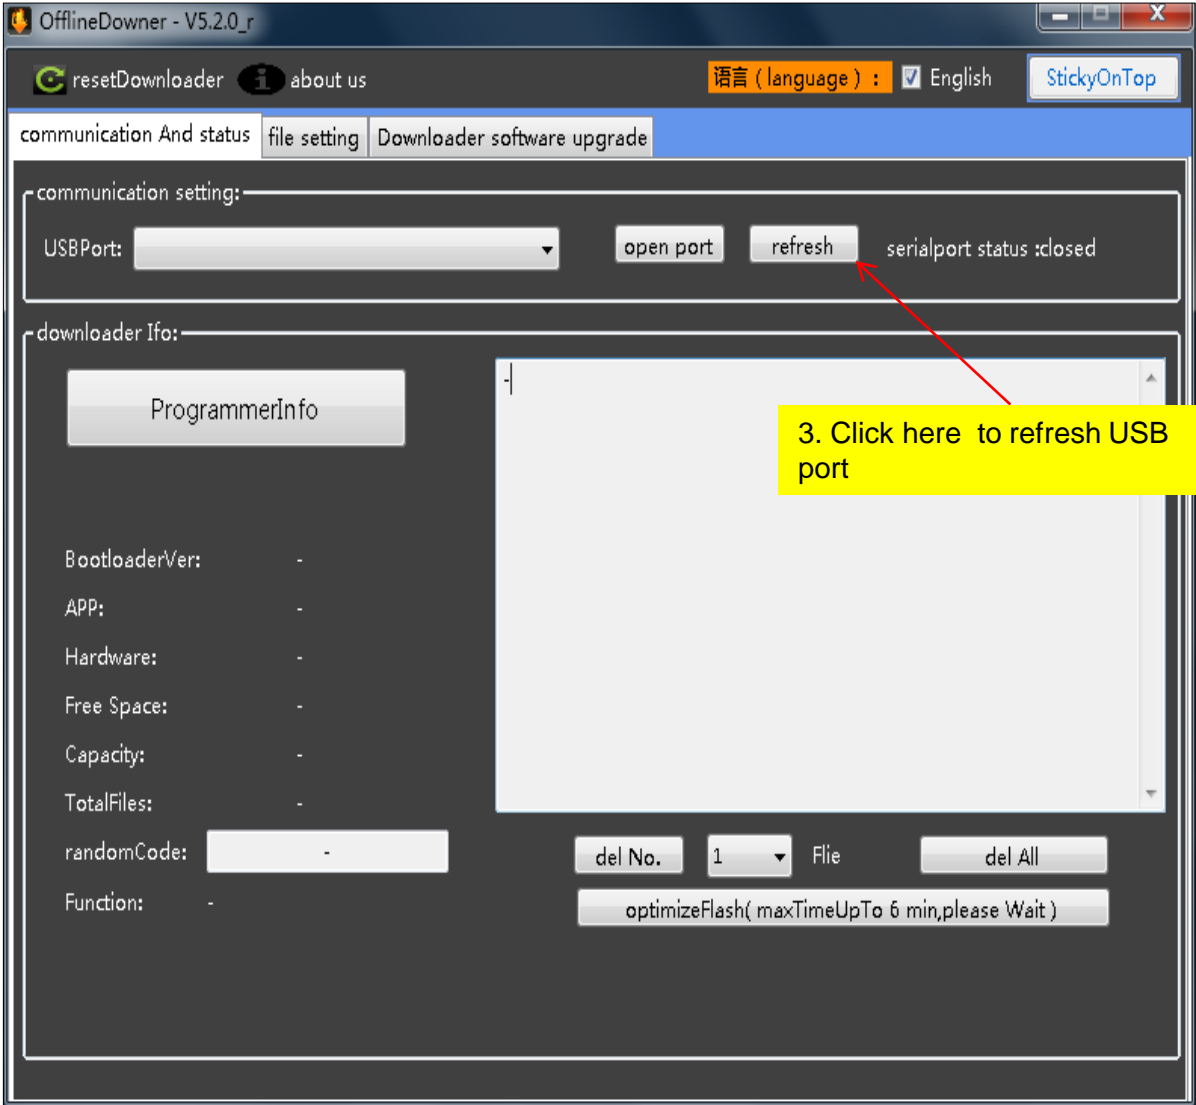


3. Click here to refresh USB port

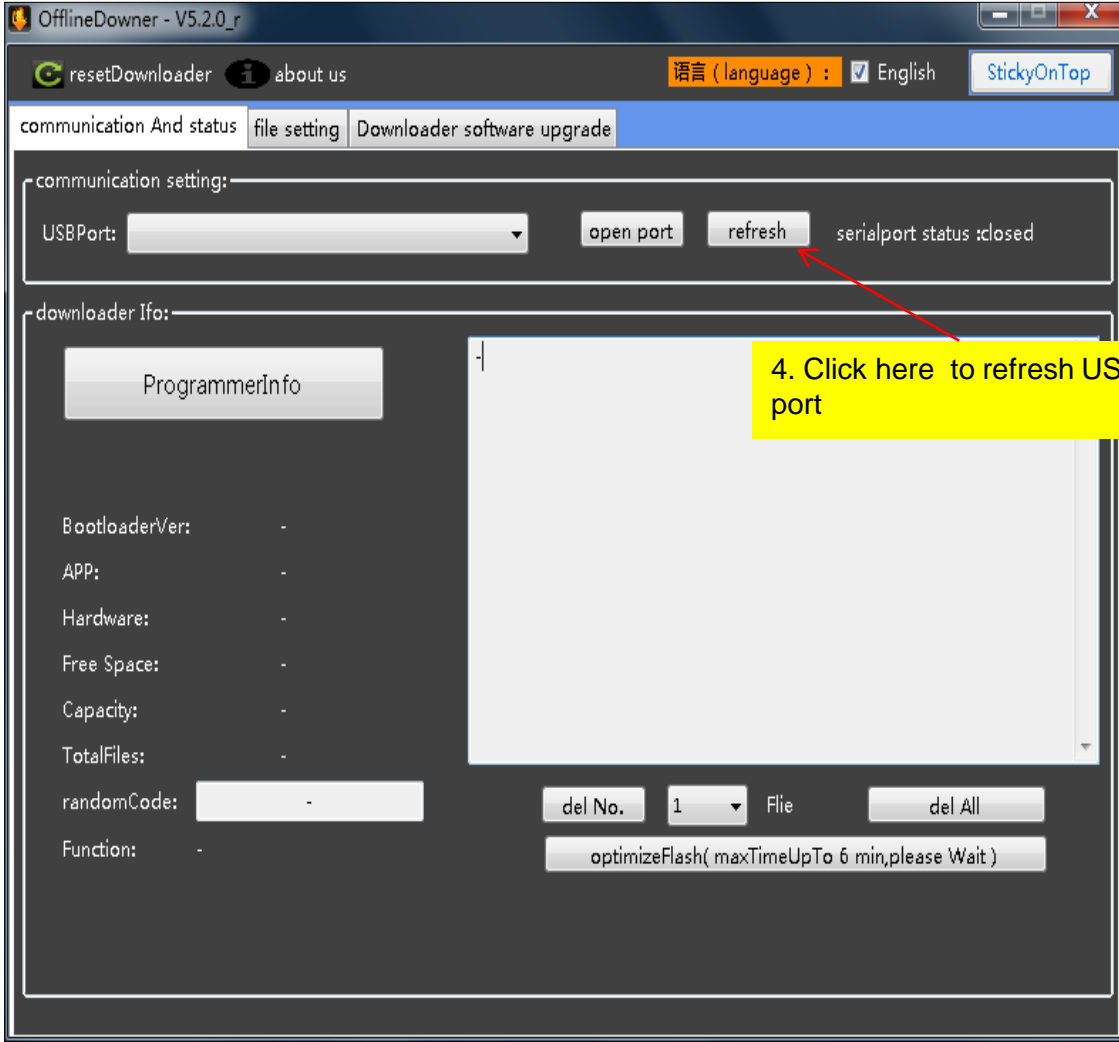

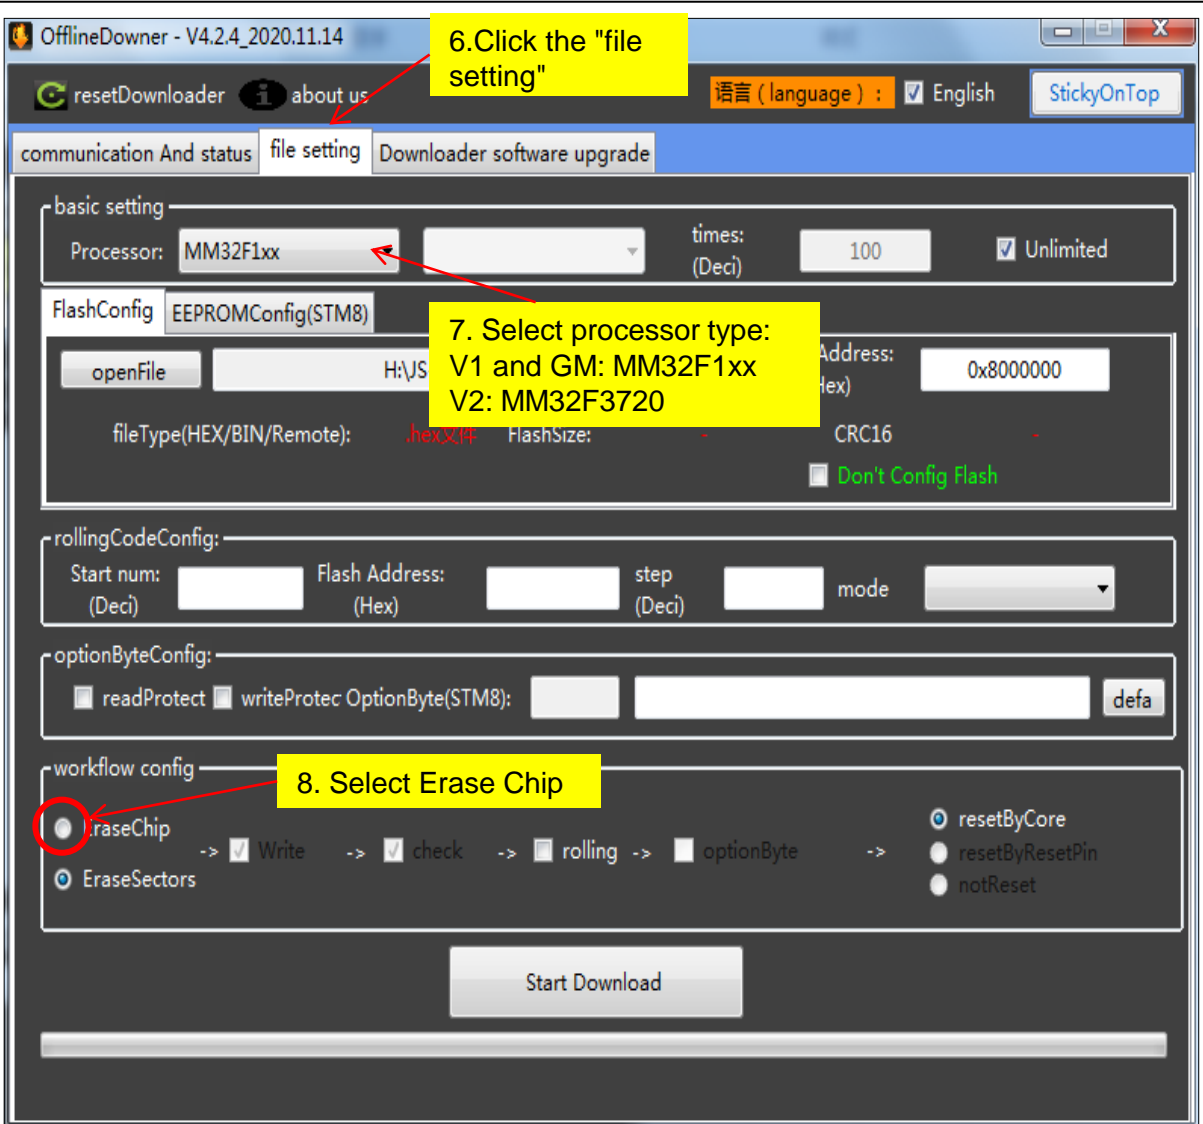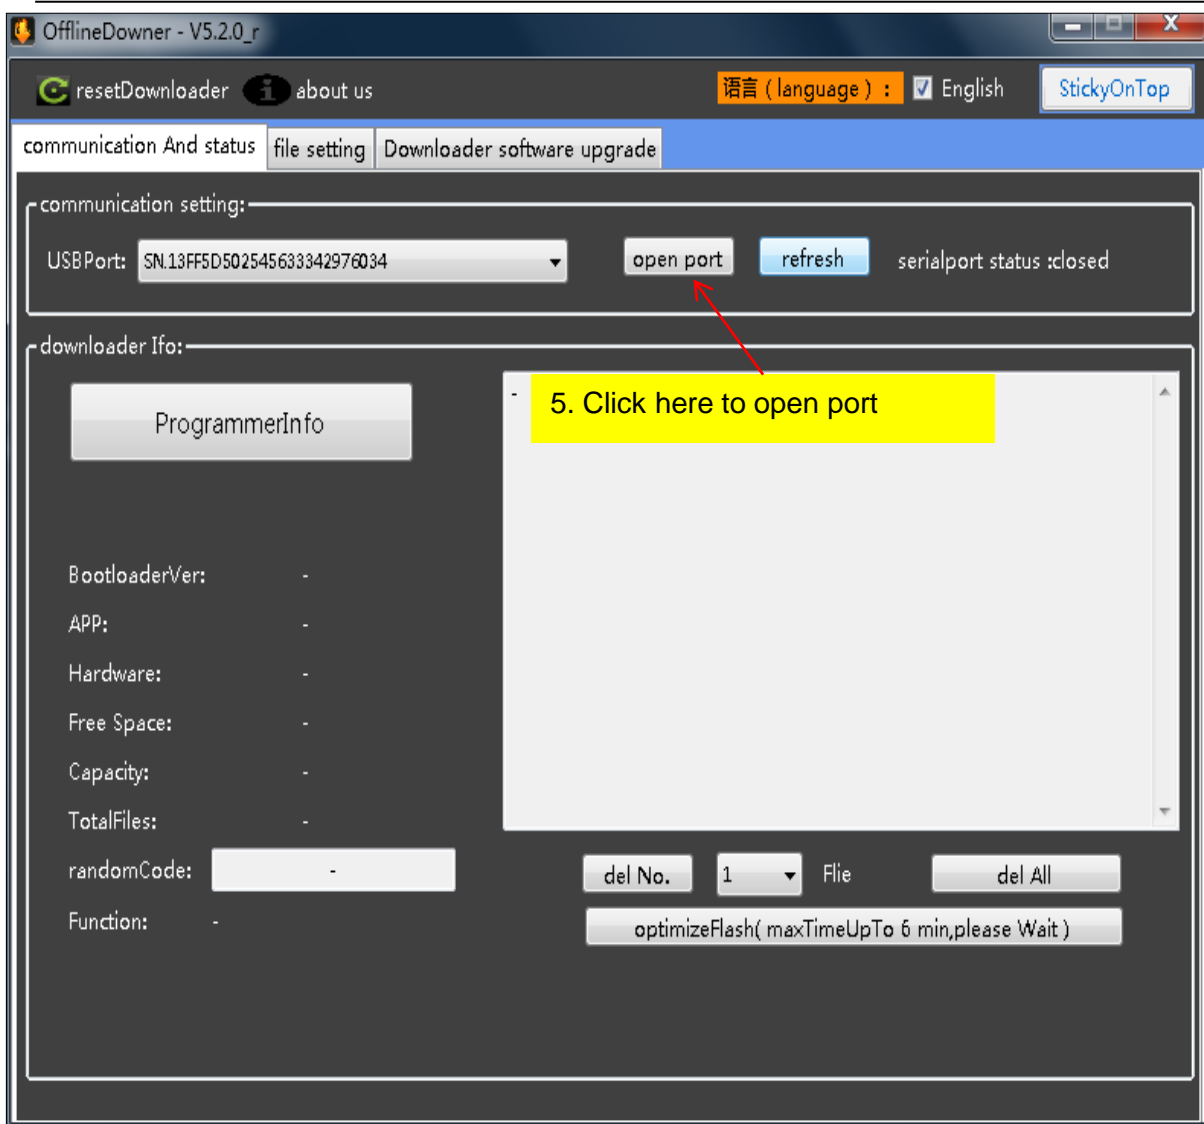

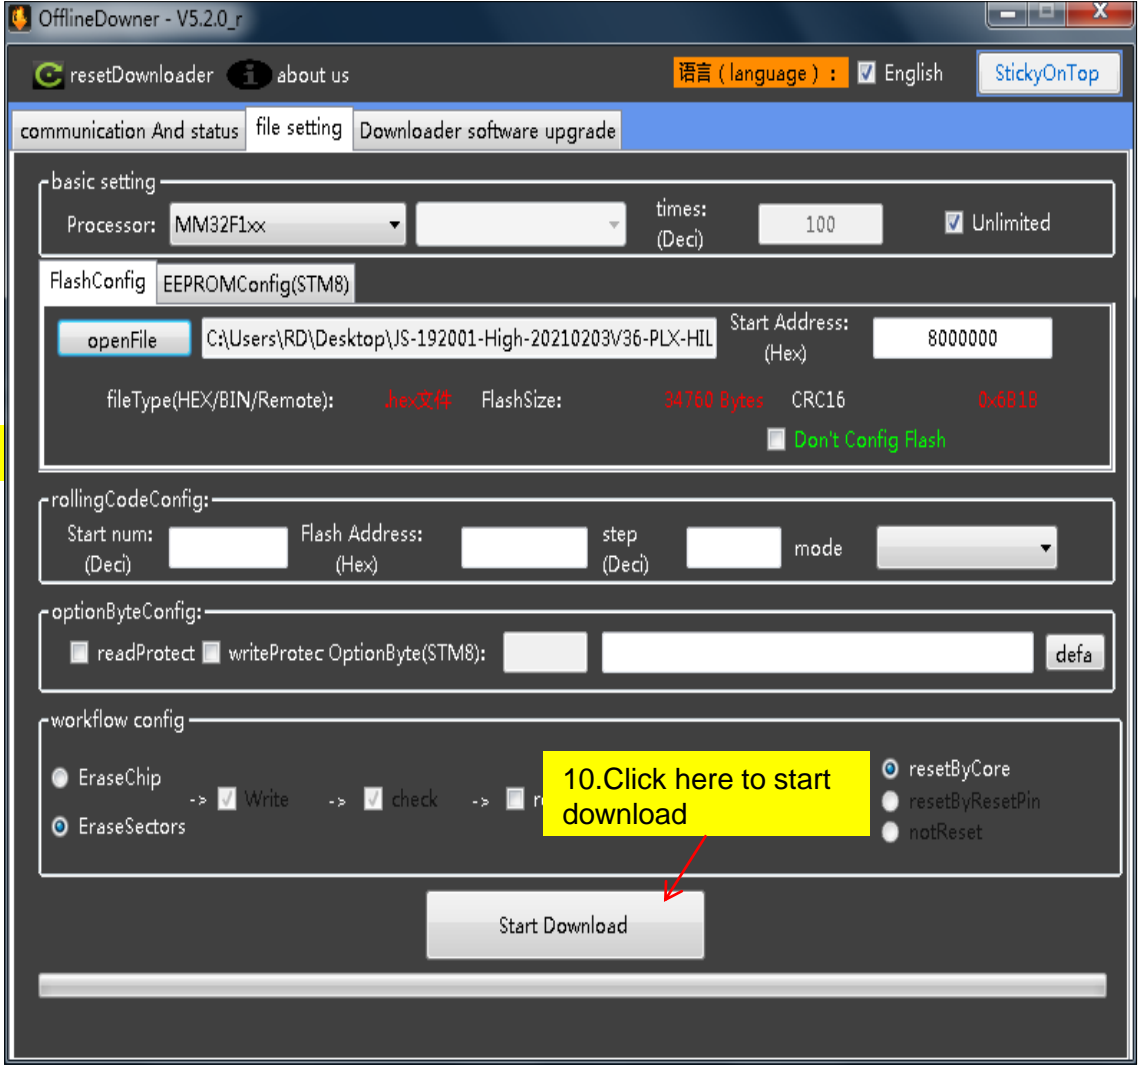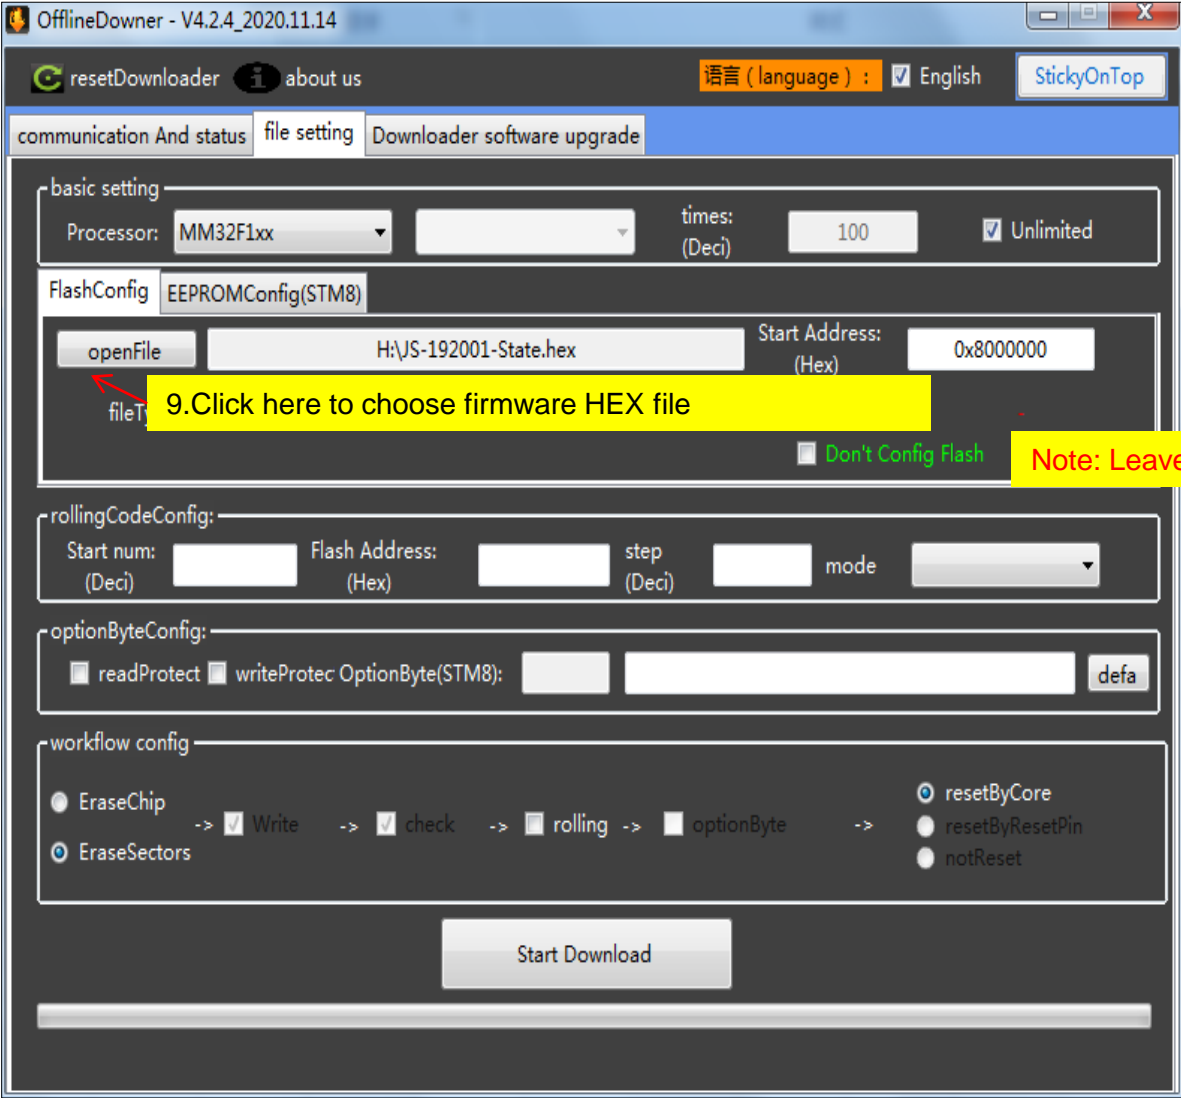

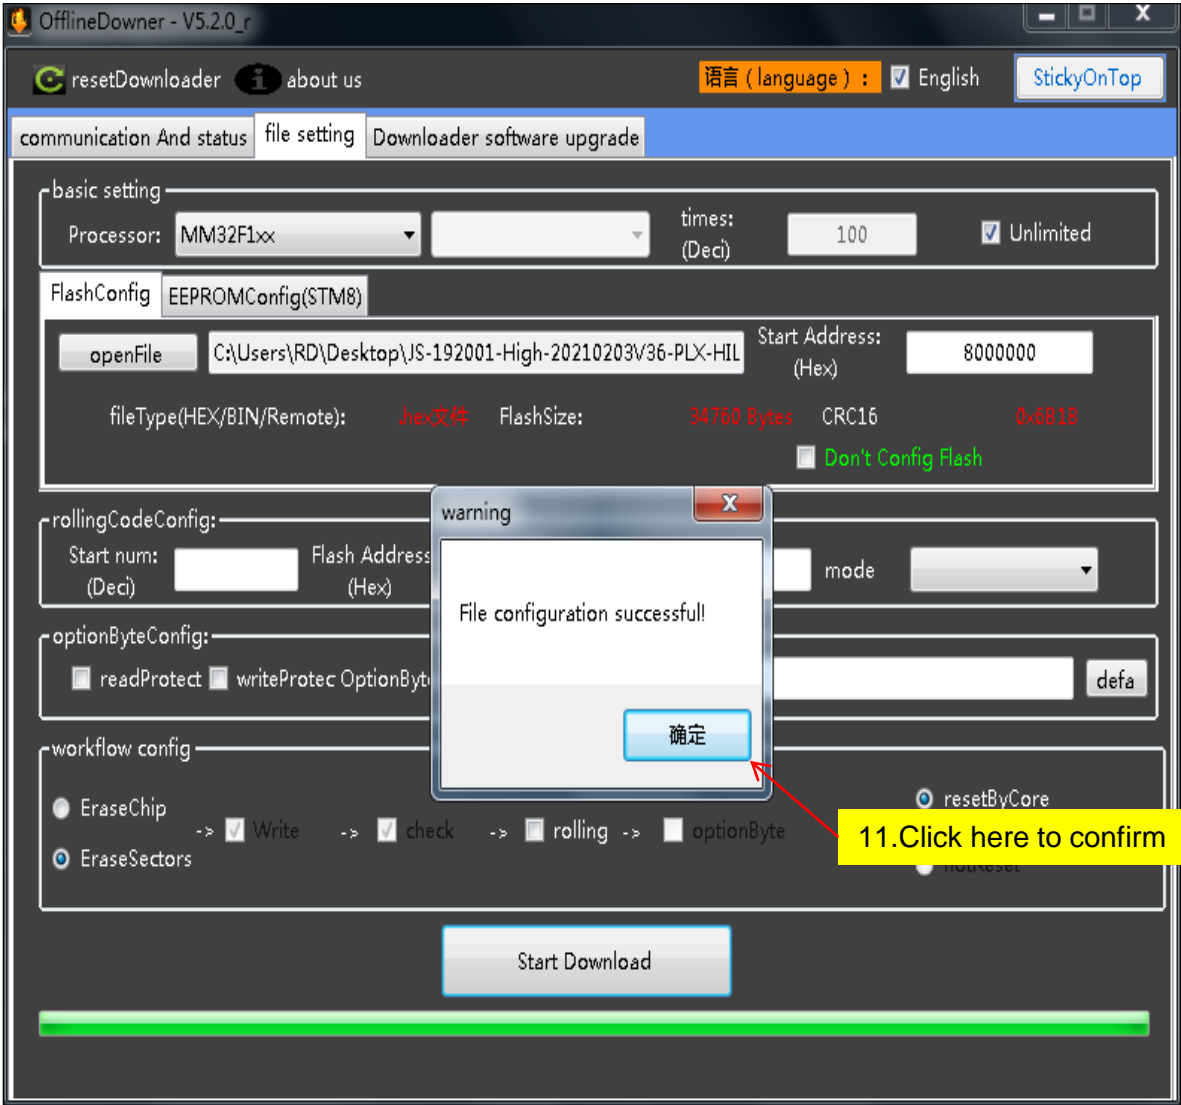

THANK YOU